


# SIP-T31 & T31P & T31G Classic IP Phone

Quick Start Guide



# **Package Contents**


The following items are included in your package. If you find anything missing, contact your system administrator.

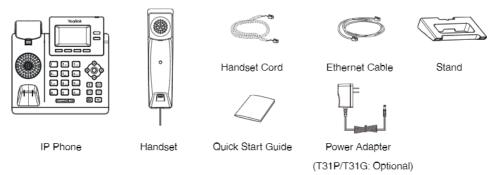

We recommend that you use the accessories provided or approved by Yealink. The unapproved third-party accessories may result in reduced performance.


# **Assembling the Phone**

#### 1. Attach the stand:

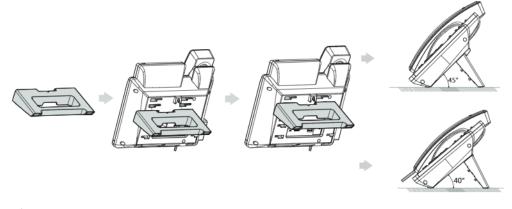


You can also mount the phone to a wall.

#### 2. Connect the handset and optional headset:

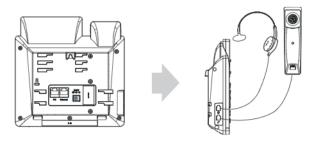

### 3. Connect the network and power:

You have two options for network and power connections. Your system administrator will advise you which one to use.

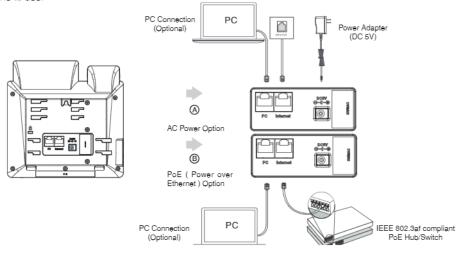

The IP phone should be used with Yealink original power adapter (5V/600mA) only. The use of the third-party power adapter may cause the damage to the phone. If you are connecting a PC to your phone, we recommend that you use the Ethernet cable provided by Yealink.

If inline power (PoE) is provided, you don't need to connect the power adapter. Make sure the hub/switch is PoE-compliant. PoE is only applicable to the SIP-T31P/T31G IP phone.

# **Startup**

After the IP phone is connected to the network and supplied with power, it automatically begins the initialization process. After startup, the phone is ready for use. You can configure the phone via phone user interface or web user interface.



# Placing a Call

### Using the handset:

- 1. Pick up the handset.
- 2. Enter the number and press the Send soft key.

### Using the speakerphone:

- With the handset on-hook, press
- 2. Enter the number and press the Send soft key.

### Using the headset:

- With the headset connected, press 
   to activate the headset mode.
- 2. Enter the number and press the Send soft key.

# Answering a Call

### Using the handset:

Pick up the handset.

### Using the speakerphone:

Press 📢

### Using the headset:

Press 🕡

You can reject an incoming call by pressing the **Reject** soft key.

# Ending a Call

### Using the handset:

Hang up the handset or press the EndCall soft key.

### Using the speakerphone:

Press or the EndCall soft key.

#### Using the headset:

Press the EndCall soft key.

### Redial

- Press to enter the Placed Calls list, select the desired entry, and press or the Send soft key.
- Press twice when the phone is idle to dial out the last dialed number.

### **Call Mute**

- Press to mute the microphone during a call.
- Press again to un-mute the call.

### Call Hold

#### To place a call on hold:

Press the Hold soft key during an active call.

### To resume the call, do one of the following:

- If there is only one call on hold, press the Resume soft key.
- If there is more than one call on hold, select the desired call, and press the Resume soft key.

# **Call Transfer**

You can transfer a call in the following ways:

#### Blind Transfer

- 1. Press ( or the Trans soft key during a call.
- Enter the number you want to transfer to.
- 3. Press ( or the B Trans soft key.

#### Seml-Attended Transfer

- 1. Press or the Trans soft key during a call.
- Enter the number you want to transfer to, and press the Send soft key.
- Press (-) or the Trans soft key when you hear the ring-back tone.

#### Attended Transfer

- 1. Press or the Trans soft key during a call.
- Enter the number you want to transfer to, and press the Send soft key.
- Press ( or the Trans soft key when the second party answers.

 
### **Call Forward**

### To enable call forward:

- Press the Menu soft key when the phone is idle, and then select Features->Call Forward.
- 2. Select the desired forward type.
- Enter the number you want to forward to. For No Answer Forward, select the desired ring time to wait before forwarding from the After Ring Time field.
- 4. Press the Save soft key to accept the change.

## Call Conference

- Press the Conf soft key during an active call. The call is placed on hold.
- Enter the number of the second party, and press the Send soft key.
- Press the Conf soft key again when the second party answers. All parties are now joined in the conference.
- 4. Press the EndCall soft key to disconnect all parties.



# Speed Dial

### To configure a speed dial key:

- Press the Menu soft key when the phone is idle, and then select Features->Dsskey.
- Select the desired DSS key, and press the Enter soft key.
- Select SpeedDlal from the Type field, select the desired line from the Account ID field, enter a label in the Label field, enter the number in the Value field.
- 4. Press the Save soft key to accept the change.

#### To use the speed dial key:

Press the speed dial key to dial out the preset number.

## Voice Message

Message waiting indicator on the idle screen indicates that one or more voice messages are waiting at the message center. The power indicator LED slowly flashes red.

#### To listen to voice messages:

- 1. Press or the Connect soft key.
- Follow the voice prompts to listen to your voice messages.

# Call History

- Press the History soft key when the phone is idle, press for to scroll through the list.
- Select an entry from the list, you can do the following:
  - · Press the Send soft key to call the entry.
  - Press the **Delete** soft key to delete the entry from the list.

If you press the **Option** soft key, you can also do the following:

- Select **Detail** to view detailed information about the entry
- Select Add to Contacts to add the entry to the local directory.
- Select Add to Blacklist to add the entry to the blacklist.
- Select Delete All to delete all entries from the list.

# **Contact Directory**

#### To add a contact:

- Press the DIr soft key when the phone is idle, and then select All Contacts.
- Press the Add soft key to add a contact.
- Enter a unique contact name in the Name field and contact numbers in the corresponding fields.
- Press the Save soft key to accept the change.

#### To edit a contact:

- Press the Dir soft key when the phone is idle, and then select All Contacts.
- Press (A) or (Y) to select the desired contact, press
  the Option soft key and then select Detail from the
  prompt list.
- Edit the contact information.
- Press the Save soft key to accept the change.

#### To delete a contact:

- Press the DIr soft key when the phone is idle, and then select All Contacts.
- Press (A) or (b) to select the desired contact, press
  the Option soft key and then select Delete from the
  prompt list.
- Press the **OK** soft key when the LCD screen prompts "Delete selected item?".

# **Volume Adjustment**

Press • to adjust the volume.